OPERATING INSTRUCTIONS

AIR COMBINATION NAILER/STAPLER

MODEL: 9040F

SENCO®

Rendimiento. Poder.
Productividad.™

CONTENTS

SUMMARY ---------- 1

SPECIFICATIONS ---------- 1

SAFETY WARNINGS & CAUTIONS ---------- 1

UNPACKING ---------- 2

SETTING ---------- 2

CONNECTING THE TOOL TO AN AIR SUPPLY ---------- 3

LOADING THE FASTENERS ---------- 3

OPERATING THE TOOL ---------- 3

REGULAR MAINTENANCE ---------- 3

TROUBLE SHOOTING ---------- 4

EXPLODED VIEW DRAWING ---------- 5

PARTS LIST ---------- 6

READ ALL INSTRUCTIONS BEFORE OPERATING THE TOOL

SUMMARY

You will need the instruction for the safety warning and cautions, assembly instruction, operating and maintaining procedures, exploded view drawing and parts list. Keep your invoice with this instruction. Keep the instruction and invoice in a safe and dry place for future reference.

SPECIFICATIONS

Characteristic	Value
Minimum Operating Air Pressure	60 PSI
Maximum Operating Air Pressure	100 PSI
Nail Length Range	3/4" -- 2"
Staple Length Range	5/8" -- 1-9/16"
Nail Size	18 Gauge
Nail Capacity	100
Air Inlet	1/4" NPT
Air Consumption	1.7 CFM @ 80PSI
Tool Weight	3.4 lbs

SAFETY WARNINGS& CAUTIONS

1. **KEEP WORKING AREA CLEAN.** Cluttered areas invite injuries,
2. **DON'T ALLOW CHILDREN KEEP AT THE WORKING AREA.** Don't let them handle the tool.
3. **DO NOT OPERATE THIS TOOL IF UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.** Read warning label on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not attempt to operate.
4. **USE SAFETY GLASSES.** Safety glasses should conform to ANSI Z87.1 specifications. Before operating, wear safety glasses against flying debris from the front and side. Safety glasses should be worn when loading, operating, unloading or servicing this tool.
5. **USE EAR PROTECTION.** The working area may be exposed to high noise levels that can lead to hearing damaged.
6. **NEVER USE OXYGEN COMBUSTIBLE GASES, BOTTLED GASES OR HIGH PRESSURE COMPRESSED GAS AS A POWER SOURCE FOR THIS TOOL.** The tool may explode and cause serious injury.
7. **DRESS SAFELY.** Protective gloves and nonskid footwear or safety shoes are recommended when working with and operating this tool. Don't wear loose clothing or jewelry. They can get caught in moving parts. Also, wear a protective hair covering to prevent long hair from getting caught in the tool.
8. **DO NOT FIRE TO HARD MATERIALS.** Do not attempt to shoot toward hard or brittle material such as concrete, steel or tile.
9. **WHEN OPERATING TOOL.** keep the proper footing and balance to avoid damaged resulting from losing balance.
10. **CHECK DAMAGED PARTS.** Before using tool, carefully check if there is any part damaged.
11. **REPLACE PARTS AND ACCESSORIES.** Only allow use same replacement parts while servicing. Approved accessories and replacement parts are available.
12. **KEEP ALERT.** Watch what you are doing. Use common sense. Do not operate any tool when you are tired.
13. **STORE THE TOOL.** When not in use, tool should be cleaned, fully assembled and then, stored in a dry location to reduce rust. For safety, keep out of reach of children.

14. **OUTDOORS EXTENSION CORDS.** When air compressor is used outdoors, use only rounded jackets extensions cords intended for outside use. See manufacturer's manual for the AWG required for the compressor's amperage draw.
15. **PAY ATTENTION TO AIR HOSE AND THEIR CONNEATIONS.** Don't trip over hoses. Make sure all connections are tight.
16. **AFTER LOADING THE FASTENERS.** never point the tool at yourself or bystanders.
17. **USE THE CORRECT AIR CONNECTOR.** The connector on the tool must not hold pressure when the air supply is disconnected. If the wrong fitting is used, the tool can be charged with air after being disconnected and still be able to drive a fastener.
18. **WHEN CONNECTING THE AIR.** The tool can possibly fire the fasteners. Therefore, remove all the fasteners before connecting to the air.
19. **DO NOT DEPRESS THE SAFE BRACKET AND THE TRIGGER WHEN LOADING.**
20. **IF THE FASTENERS ARE JAMMED.** Disconnect the tool from the air and remove the jammed fasteners out.
21. **THIS TOOL IS EQUIPED WITH THE SAFE BRACKET THAT CAN ADJUST THE DEPTH OF THE DRIVER.** When adjusting the depth of the driver, first disconnect the tool from the air and rotate nut by thumb to satisfactory position.

WARNING: The warning, caution, and instructions explained in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that COMMON SENSE AND CAUTION ARE FACTORS WHICH CANNOT BE BUILT INTO THIS PRODUCT, BUT MUST BE SUPPLIED BY THE OPERATOR.

UNPACKING

When unpacking, please refer to following table and check all the parts are complete. If any parts are missing or broken, please call seller for help.

Description	Qty
Combination Nailer/Stapler	1
S3 Hex Key	1
S4 Hex Key	1
Air Tool Oil	1
Operating instruction	1

SETTING

Your air tool is fully assembly when you receive it. Before using it, attach the air line and desired air system accessories. See Figure 1 for the recommended accessories and connection order. Be sure the air hose is depressurized when installing or removing adapters to the air line.

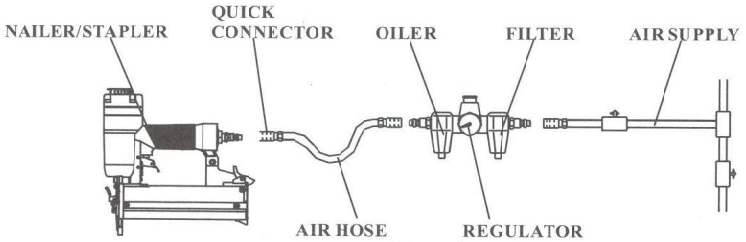


Figure 1

CONNECTING THE TOOL TO AN AIR SUPPLY

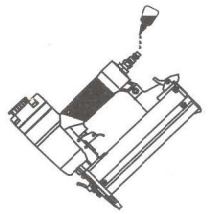


Figure 2

1. Determine if the tool needs oil and, if necessary, place two drops of oil in the AIR PLUG(74) as shown in Figure 2. If you are using an automatic in-line oiler, check and add oil if necessary.
2. Turn the compressor on and set the regulator to the proper pressure according to the size and type of fastener being used.
3. Connect the tool to the air supply (see setting for air supply connection recommendations).

LOADING THE FASTENERS

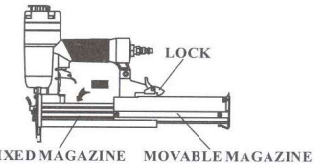


Figure 3

1. Depress the LOCK (58) to release the MOVABLE MAGAZINE (64) and pull the magazine out fully as shown in Figure 3.
2. Place a full clip of the specified type and size fasteners on the FIXED MAGAZINE (56), 100 fasteners may be loaded in the magazine.
3. Push the MOVABLE MAGAZINE ASSEMBLY forward until it was locked.

OPERATING THE TOOL

Test the driving depth in a sample piece of wood before using. If the fasteners are being driven too far or not far enough, adjust the regulator to provide less air pressure or more air pressure.

1. Connect the tool to the air supply. Make sure the air pressure is in correct range denoting in the section SPECIFICATIONS.
2. Load fastener as above the direction given in the section called LOADING THE FASTENER.
3. Hold the Body (23), press the Drive guide (51) to work surface, being sure that the tool is straight and then, gently depress the Trigger (43) to drive the fastener.
4. Lift the tool of the working surface.
5. The tool has two driving modes:
   1). Put the nose on the working surface, lightly push the tool toward the working surface until the Safe bracket is depressed, then, depress the trigger to drive the fasteners.
   2). First, depress the Trigger, then, repeatedly impact the Safe bracket, the tool can repeatedly drive the fasteners. The tool will drive one fastener when the Safe bracket is impacted one time.

REGULAR MAINTENANCE

1. Frequent, but not excessive, lubrication is required for best performance. Oil added through the airline connection will lubricate internal parts. An automatic airline oiler is recommended but oil may be added manually before every operation or after about 1 hour of continuous use. Only a few drops of oil at a time are necessary. Too much oil will collect inside the tool and be blown out during the exhaust cycle. **ONLY USE PNEUMATIC TOOL OIL.** Do not use detergent oil or additives, as these lubricants will cause accelerated wear to the seal in the tool.
2. Use a small amount of oil on all moving surface and pivots.
3. Dirt and water in the air supply are major causes of pneumatic tool wear. Use a filter/oiler for better performance and longer life. The filter must have adequate flow capacity for the specific application. Consult the manufacturer's instructions for proper maintenance of you filter.
4. Keep tools clean for better and safer performance. Use nonflammable cleaning solutions (**CAUTION:** Such solutions may damaged O-ring and other tool parts) only if necessary- **DO NOT SOAK.**