EWL-80

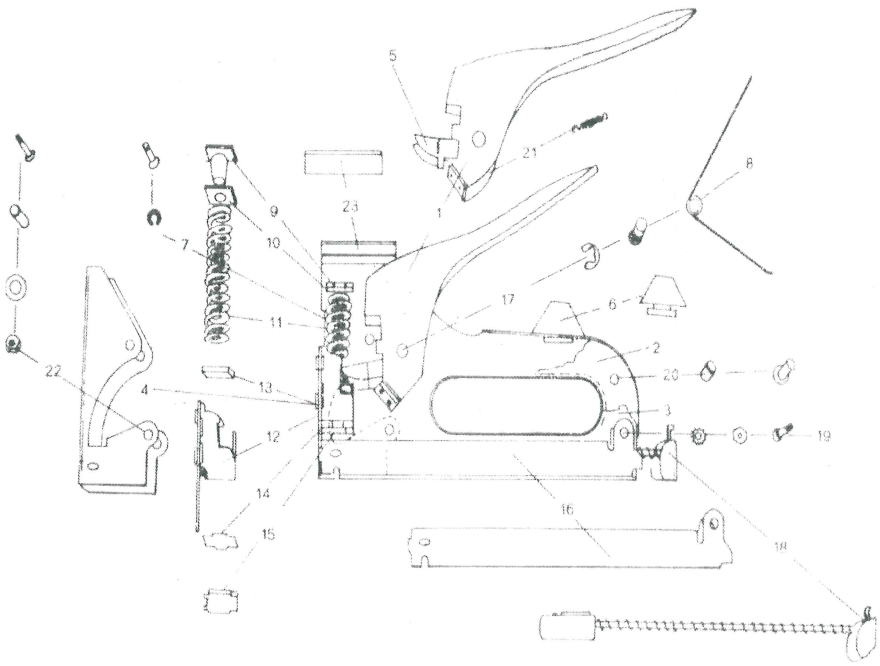


CHART NO.	PART NO.	DESCRIPTION
1	XG10014	HANDLE ASSY INCL: #1, #5 & #21
2	XG10076	MAIN BODY RIGHT
3	XG10077	MAIN BODY LEFT
4	XG10078	FRONT COVER
5	XG10018	TRIGGER
6	XG10019	RUBBER FENDER
7	XG10020	CLEVIS PIN & RING
8	XG10021	HANDLE RETURN SPRING
9	XG10022	UPPER SPACER
10	XG10023	UPPER SPACER BUMPER
11	XG10024	PLUNGER SPRING
12	XG10079	PLUNGER WITH KNIFE (DRIVER PLATE)
13	XG10026	PLUNGER BUMPER
14	XG10027	LOWER SPACER BUMPER
15	XG10028	LOWER SPACER
16	XG10080	FRAME CHANNEL ASSEMBLY
17	XG10030	CLEVIS PIN & RING
18	XG10081	PUSHER ASSEMBLY
19	XG10032	REAR SCREW & NUT
20	XG10033	RIVET & PEAR BUSH
21	XG10034	TRIGGER RETURN SPRING
22	XG10035	FRONT COVER SCREW, WASHER, NUT & BUSH
23	XG10036	FRONT COVER RUBBER