

HEAVY DUTY STAPLE GUN OPERATING INSTRUCTIONS

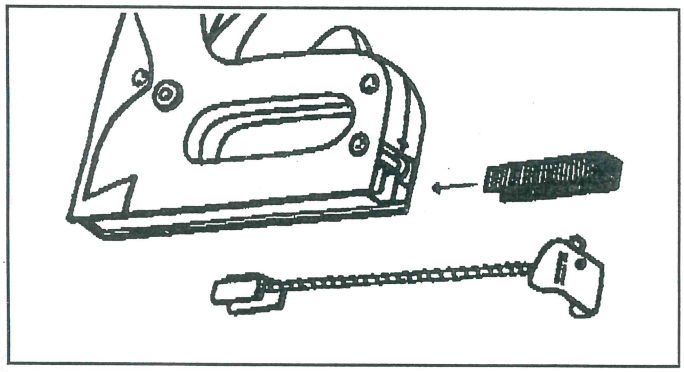

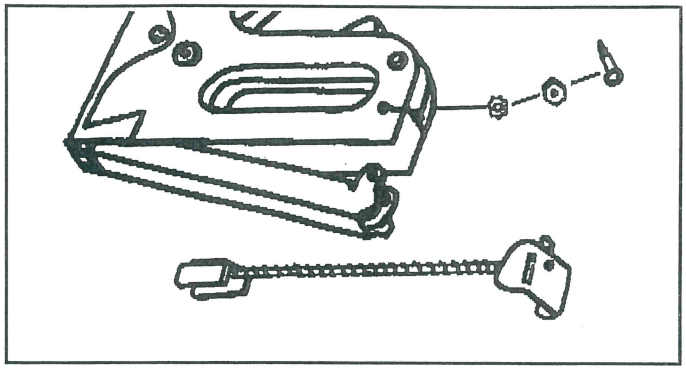

LOADING THE STAPLES (see fig. 1)

1. Pull the pusher rod out by pressing down the tab marked "press down".
2. Insert a strip of staples. NOTE: Insert the same width of staples each time. Never combine different width of staples, as this may casue delivery problems when operating.
3. Replase the pusher rod.

CLEANING THE STAPLE CHANNEL (see fig. 2)

1. Remove the pusher rod.
2. Remove the screw and ring from frame-channel.
3. Pull down the entire inside frame and clean it with a clean and dry rag.
   GREASE SHOULD NOT BE USED.
4. Replace frame, screw and ring. Insert pusher rod.

POSITION OF STAPLES/STAPLER PENETRATION

A good fastening cannot be obtained unless the front part of the stapler is in contact with the material. It is necessary to bear down on the stapler so the stapler is totally flat on the material when stapling.

SELECTING A STAPLE SIZE

1. The thickness of the material to be stapled needs to be considered.
2. The hardness of the material to be stapled needs to be considered.

- For hardwood, use a narrpw width staple. A penetration of 6 mm in the support is generally enough.
- For softwood, use a wider width staple. A penetration of 10 mm in the support is generally enough.
- In these depths of penetration you should add the thickness of the material to be stapled.

PRINTED IN TAIWAN